



Endpoint Secure on NGAF Configuration Guide

Version 8.0.26



Change Log

Date	Change Description
Nov 25, 2020	Endpoint Secure on NGAF Configuration Guide

Contents

Chapter 1 Application Scenario	1
Chapter 2 Configuration Steps	1
Step 1 Configuration on Sangfor Platform-X	1
Step 2 Connect NGAF to Sangfor Platform-X	5
Step 3 Activate Endpoint Secure on NGAF	6
Step 4 Agent deployment in Endpoint	8


Chapter 1 Application Scenario

Starting from the NGAF8.0.26 version, NGAF added an Endpoint Secure on NGAF. This enhancement enhances the way by having an MGR cloud image and combining MGR's management interface into the NGAF management interface. This enhancement allows the administrator to manage both MGR and NGAF at the same time. ES was added into NGAF to correlate.


Chapter 2 Configuration Steps

Step 1 Configuration on Sangfor Platform-X

1. You may visit <https://x.sangfor.com> and choose login to login to Platform-X.

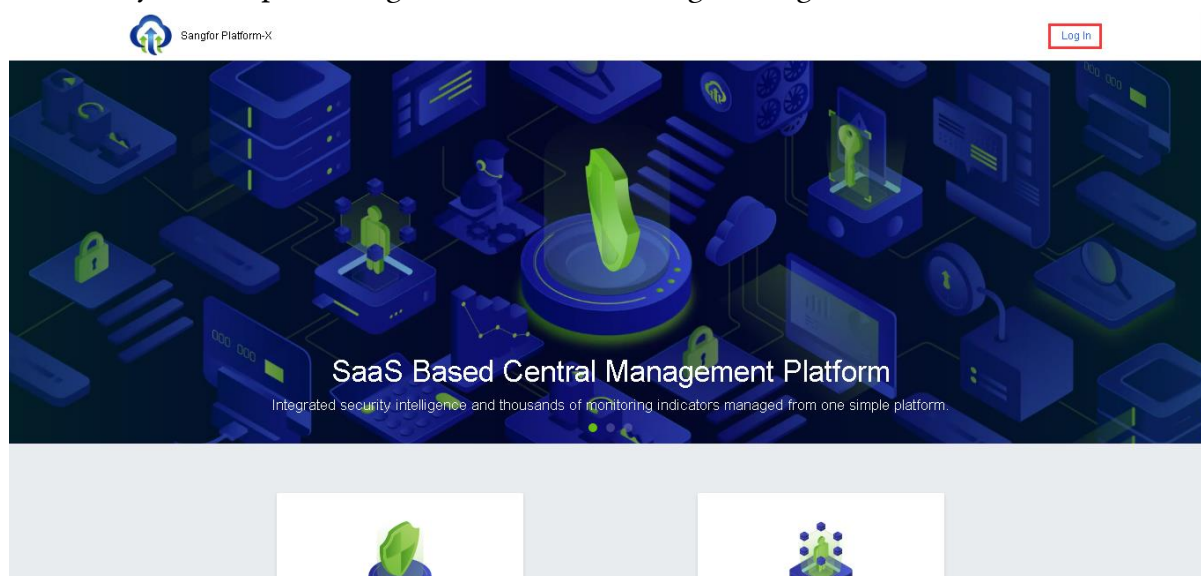

2. After you clicked login, you will redirect to the following page. You may insert the username and password to login.

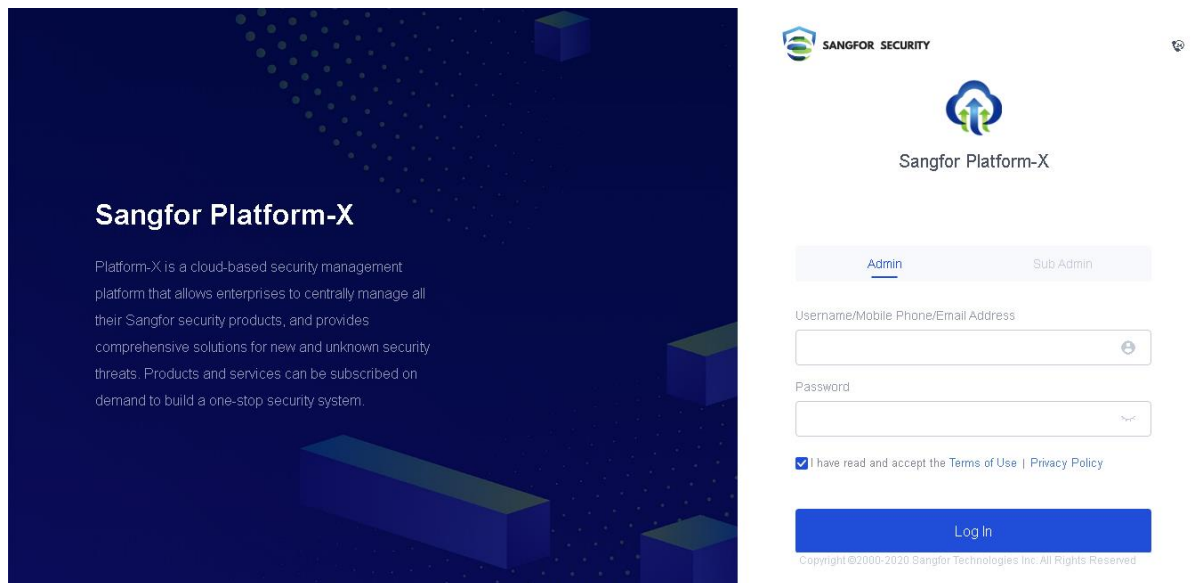

Sangfor Platform-X

Platform-X is a cloud-based security management platform that allows enterprises to centrally manage all their Sangfor security products, and provides comprehensive solutions for new and unknown security threats. Products and services can be subscribed on demand to build a one-stop security system.

SANGFOR SECURITY

Sangfor Platform-X

Admin Sub Admin

Username/Mobile Phone/Email Address

Password

☒ I have read and accept the Terms of Use | Privacy Policy


Log In

Copyright ©2000-2020 Sangfor Technologies Inc. All Rights Reserved



Note: First time registered user will receive the username and password through SMS.

3. If you login for the first time, you are required to change the initial password. After you have changed the password, you will need to login again to Platform-X.

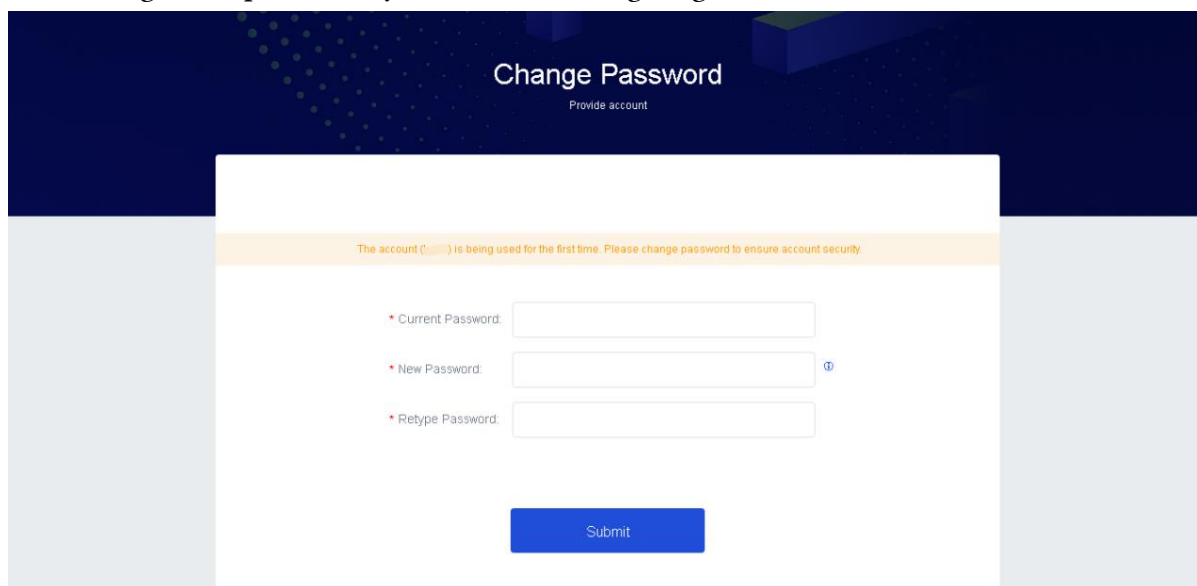

Change Password

Provide account

The account () is being used for the first time. Please change password to ensure account security.


* Current Password:

* New Password:

* Retype Password:


Submit

4. The following is the homepage of Platform-X.

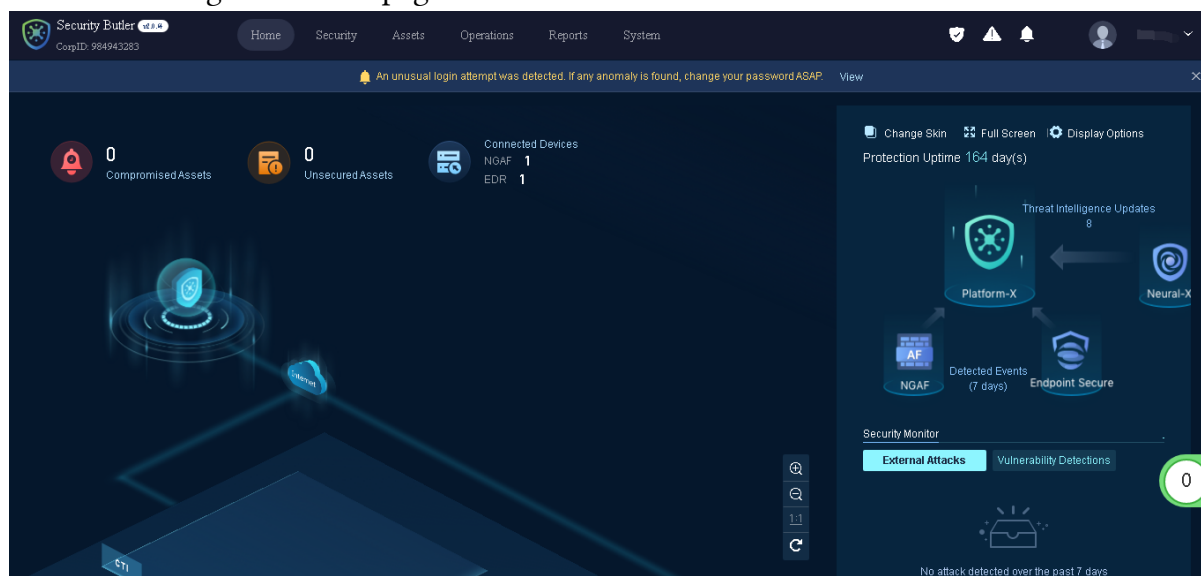


Step 2 Add new asset to Platform-X

1. Go to Asset > Branch Device and click New to add the branches.

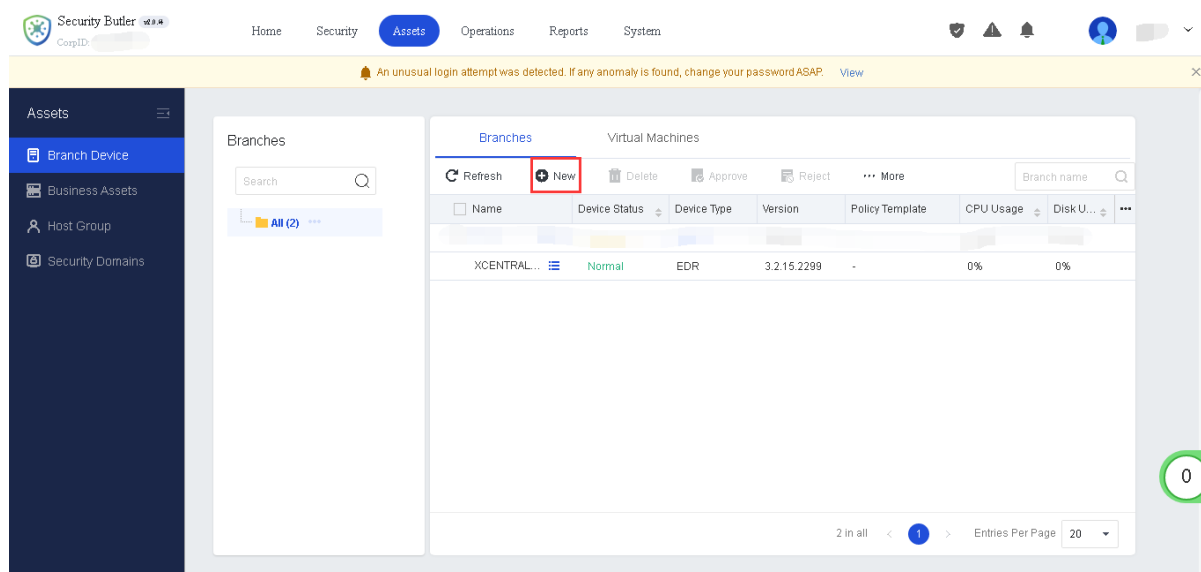


2. Insert the branch name, branch device, access token, select the device's location, and select the group.

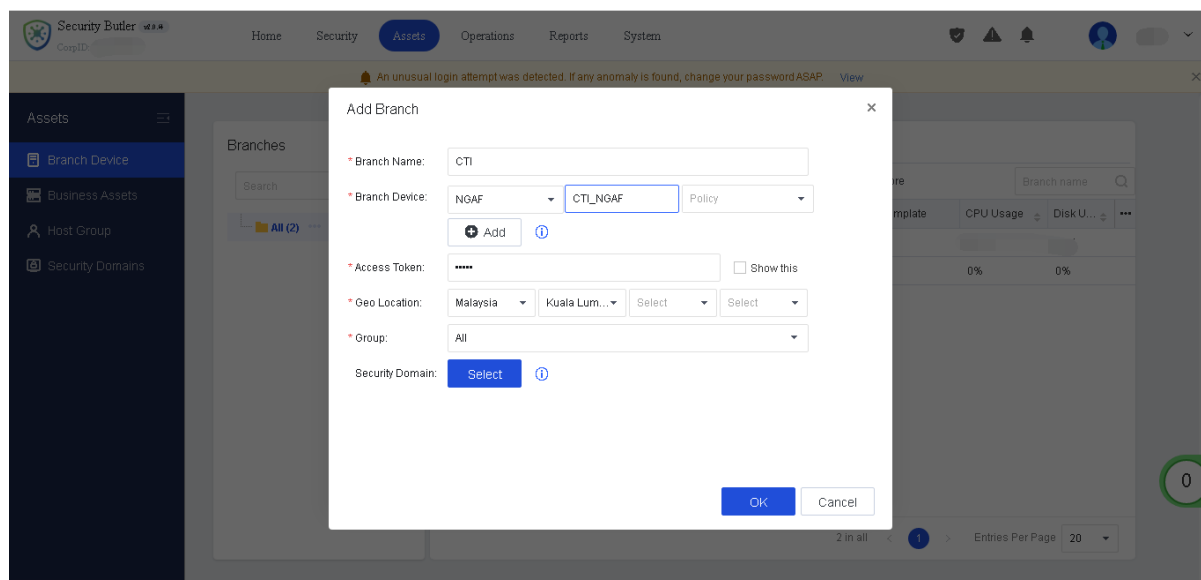


Note: By default, the access token is randomly generated. You may change the access token as needed.

3. After all the information has been inserted, and you may click OK.

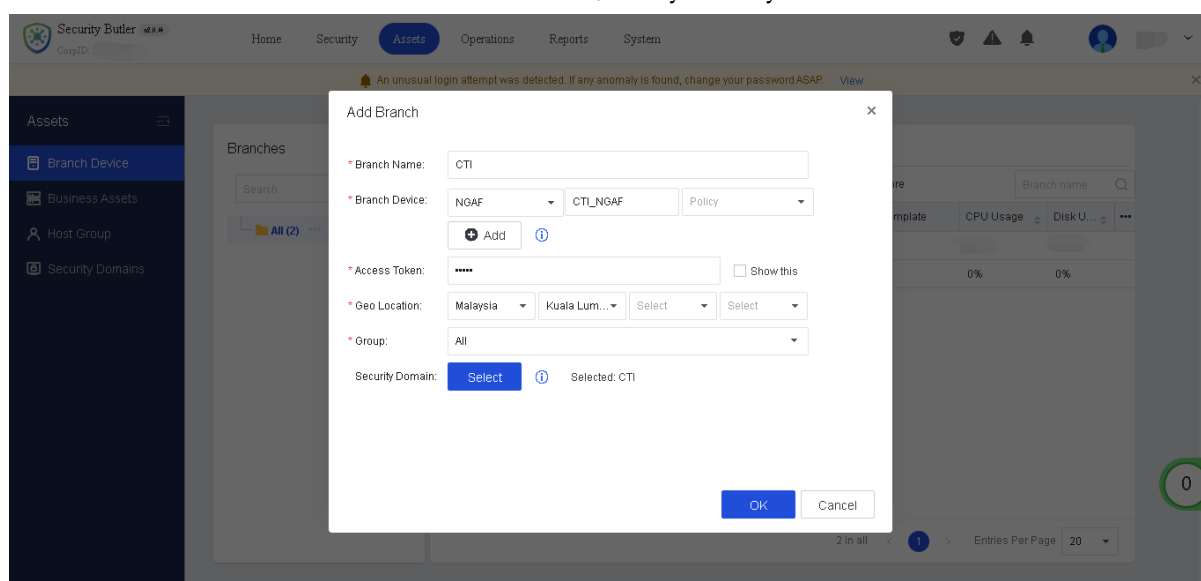


4. After you clicked OK, a new branch with asset will be created.

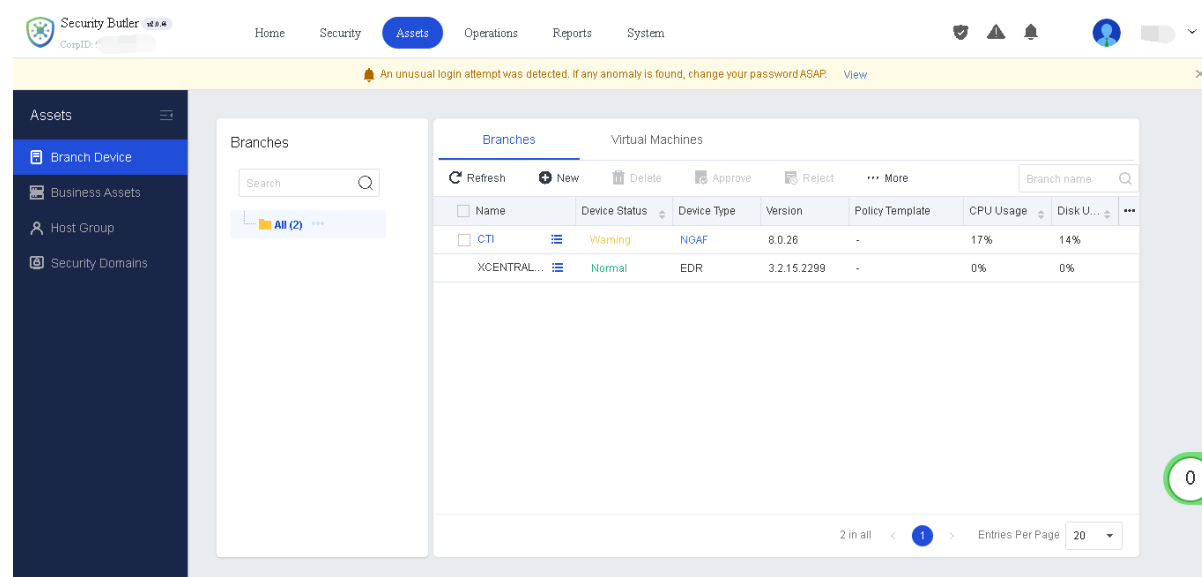

Step 2 Connect NGAF to Sangfor Platform-X


Access NGAF WebUI, go to Next Gen Security System > Cloud Correlation > Cloud Correlation Options, select PlatformX.

1. Enter CorpID, device name, an access token, and then click the Connect button.

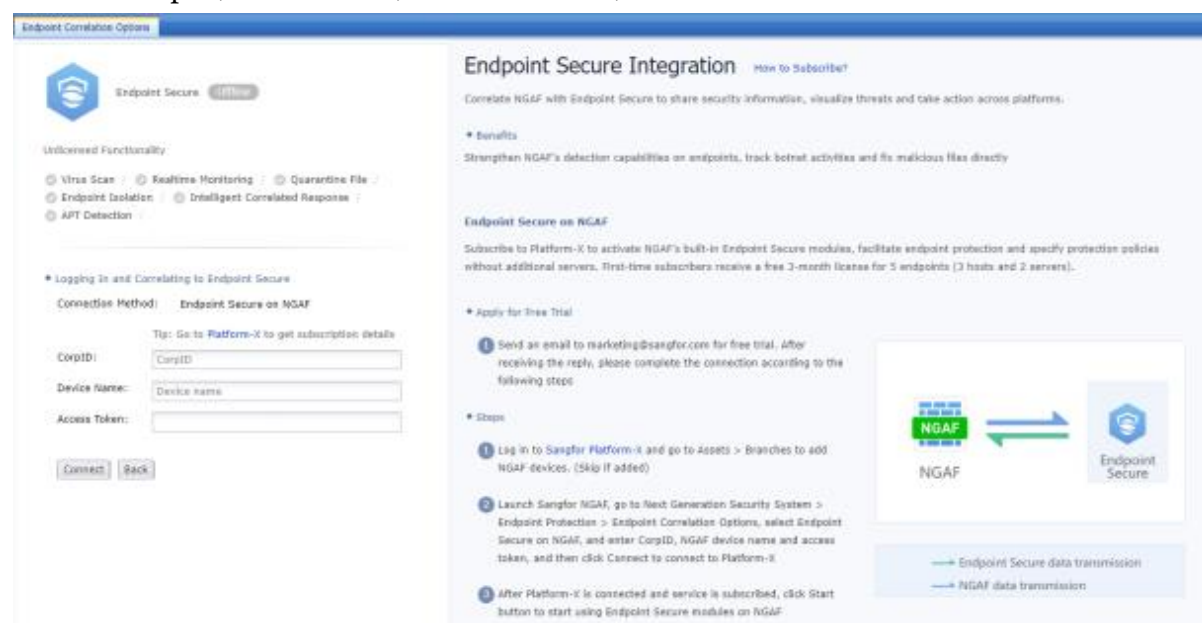


Step 3 Activate Endpoint Secure on NGAF


1. Go to Next Gen Security System > Endpoint Protection > Endpoint Correlation Options.

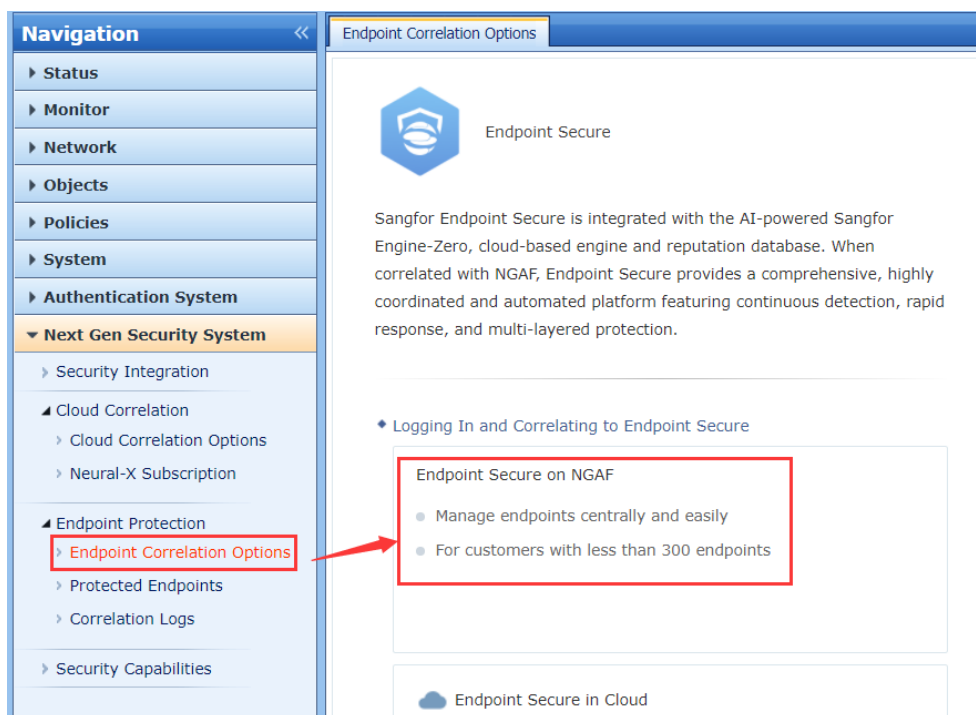

2. Click Endpoint Secure on NGAF to access the Endpoint Secure server in PX.

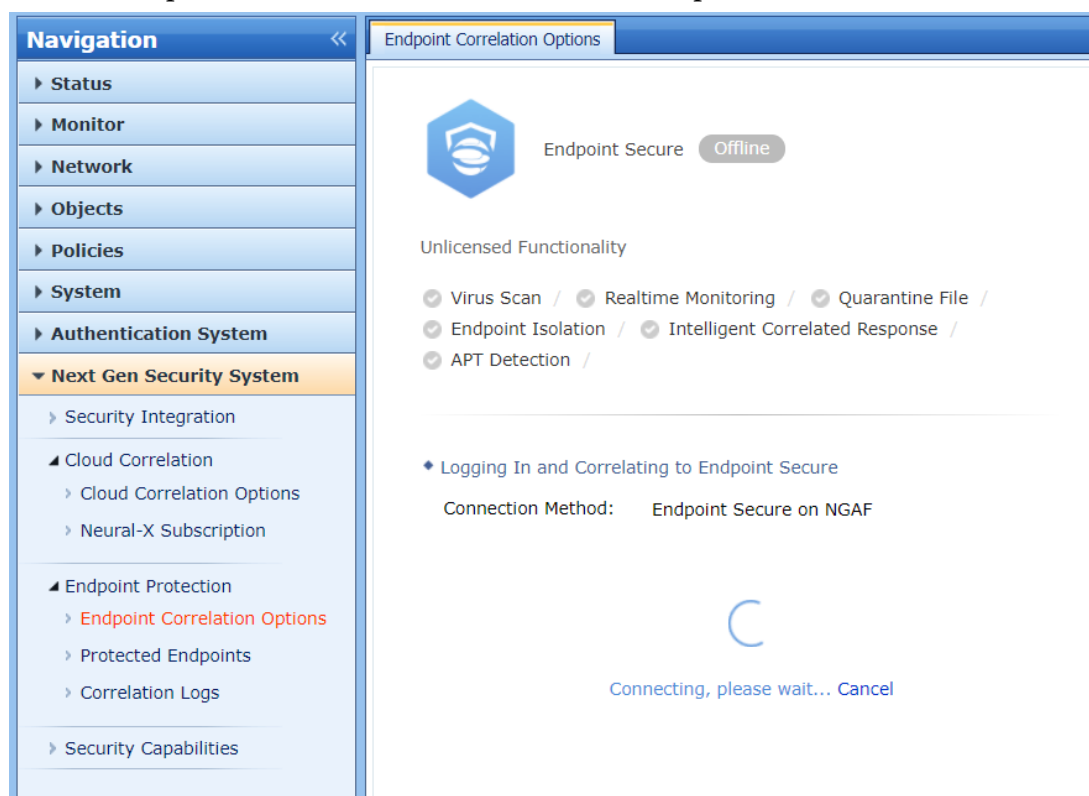


3. After NGAF successfully connect to Endpoint Secure server in PX

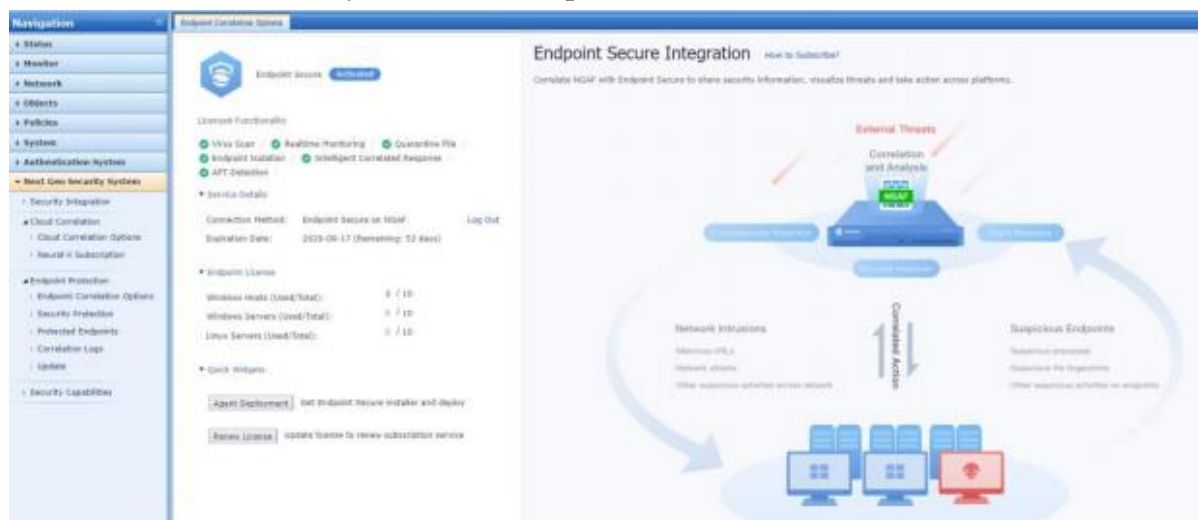


Step 4 Agent deployment in Endpoint

1. You may click on Agent Deployment to proceed to configure it.

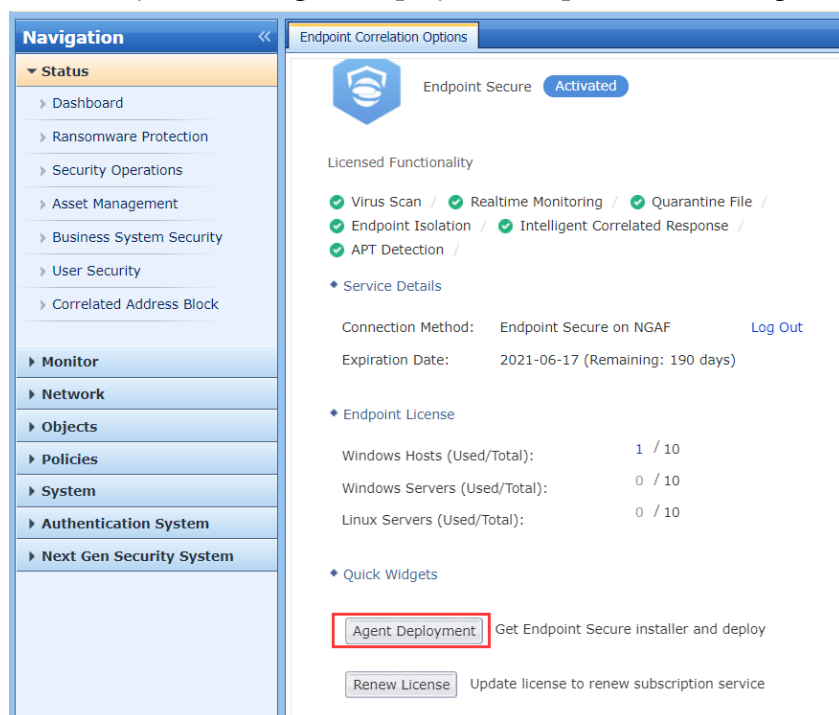

2. Select zones, interfaces, and connected IP addresses for the agent to be connected to NGAF and get the corresponding installer. Then click Add.

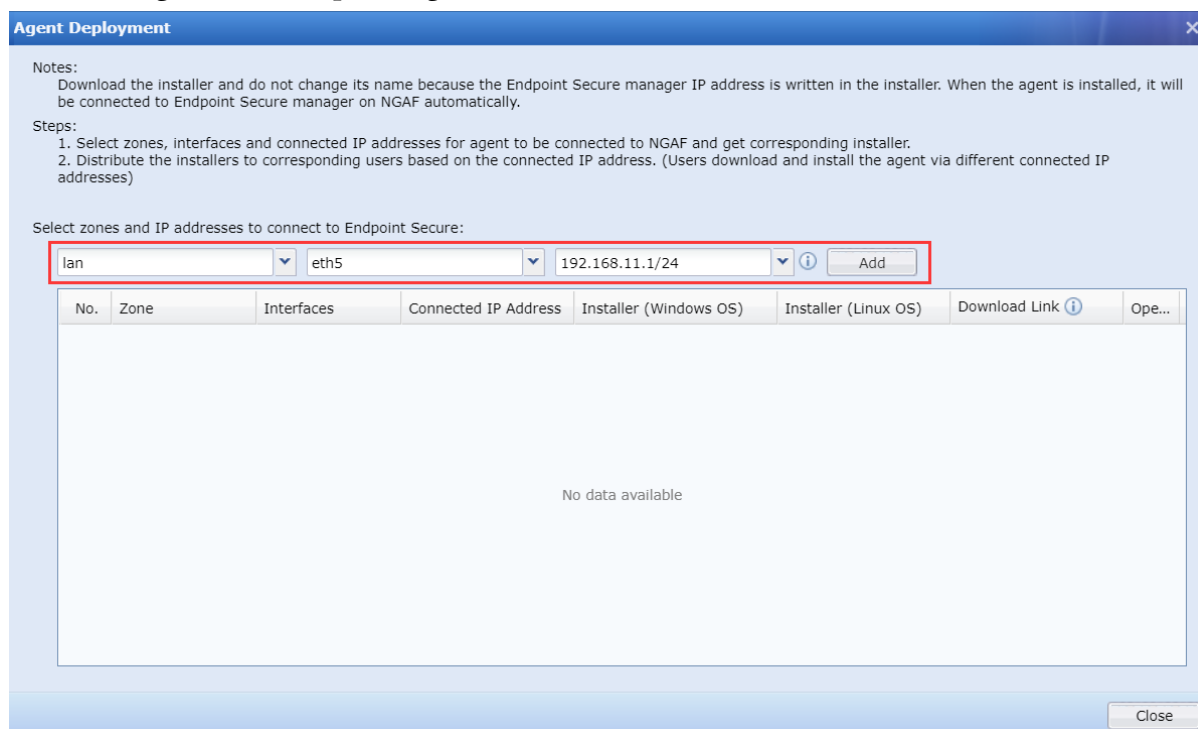

3. Click the generate button. After the installer success generated, you may click download and distribute the installer to the user to do the installation.

Agent Deployment

Notes:
Download the installer and do not change its name because the Endpoint Secure manager IP address is written in the installer. When the agent is installed, it will be connected to Endpoint Secure manager on NGAF automatically.

Steps:
1. Select zones, interfaces and connected IP addresses for agent to be connected to NGAF and get corresponding installer.
2. Distribute the installers to corresponding users based on the connected IP address. (Users download and install the agent via different connected IP addresses)

Select zones and IP addresses to connect to Endpoint Secure:

lan eth5 192.168.11.1/24 Add

No.	Zone	Interfaces	Connected IP Address	Installer (Windows OS)	Installer (Linux OS)	Download Link	Open...
1	lan	eth5	192.168.11.1/24	Generate	Download	Copy	✖

Close



Copyright © SANGFOR Technologies Inc. All rights reserved.

No part of this document may be reproduced or transmitted in any form or by any means without prior written consent of SANGFOR Technologies Inc.

SANGFOR is the trademark of SANGFOR Technologies Inc. All other trademarks and trade names mentioned in this document are the property of their respective holders.

Every effort has been made in the preparation of this document to ensure accuracy of the contents, but all statements, information, and recommendations in this document do not constitute a warranty of any kind, express or implied. The information in this document is subject to change without notice. To obtain the latest version, contact the international service center of SANGFOR Technologies Inc